



www.Source1Parts.com

FRHS SERIES 14 SEER HEAT PUMP


HVAC SERVICE PARTS

Supersedes:035-17700-001 Rev. D (0903)

035-17700-001 Rev. E (0104)

1 of 4

MODELS
FRHS0241CD
FRHS0301CD
FRHS0361CD
FRHS0421CD
FRHS0481BD

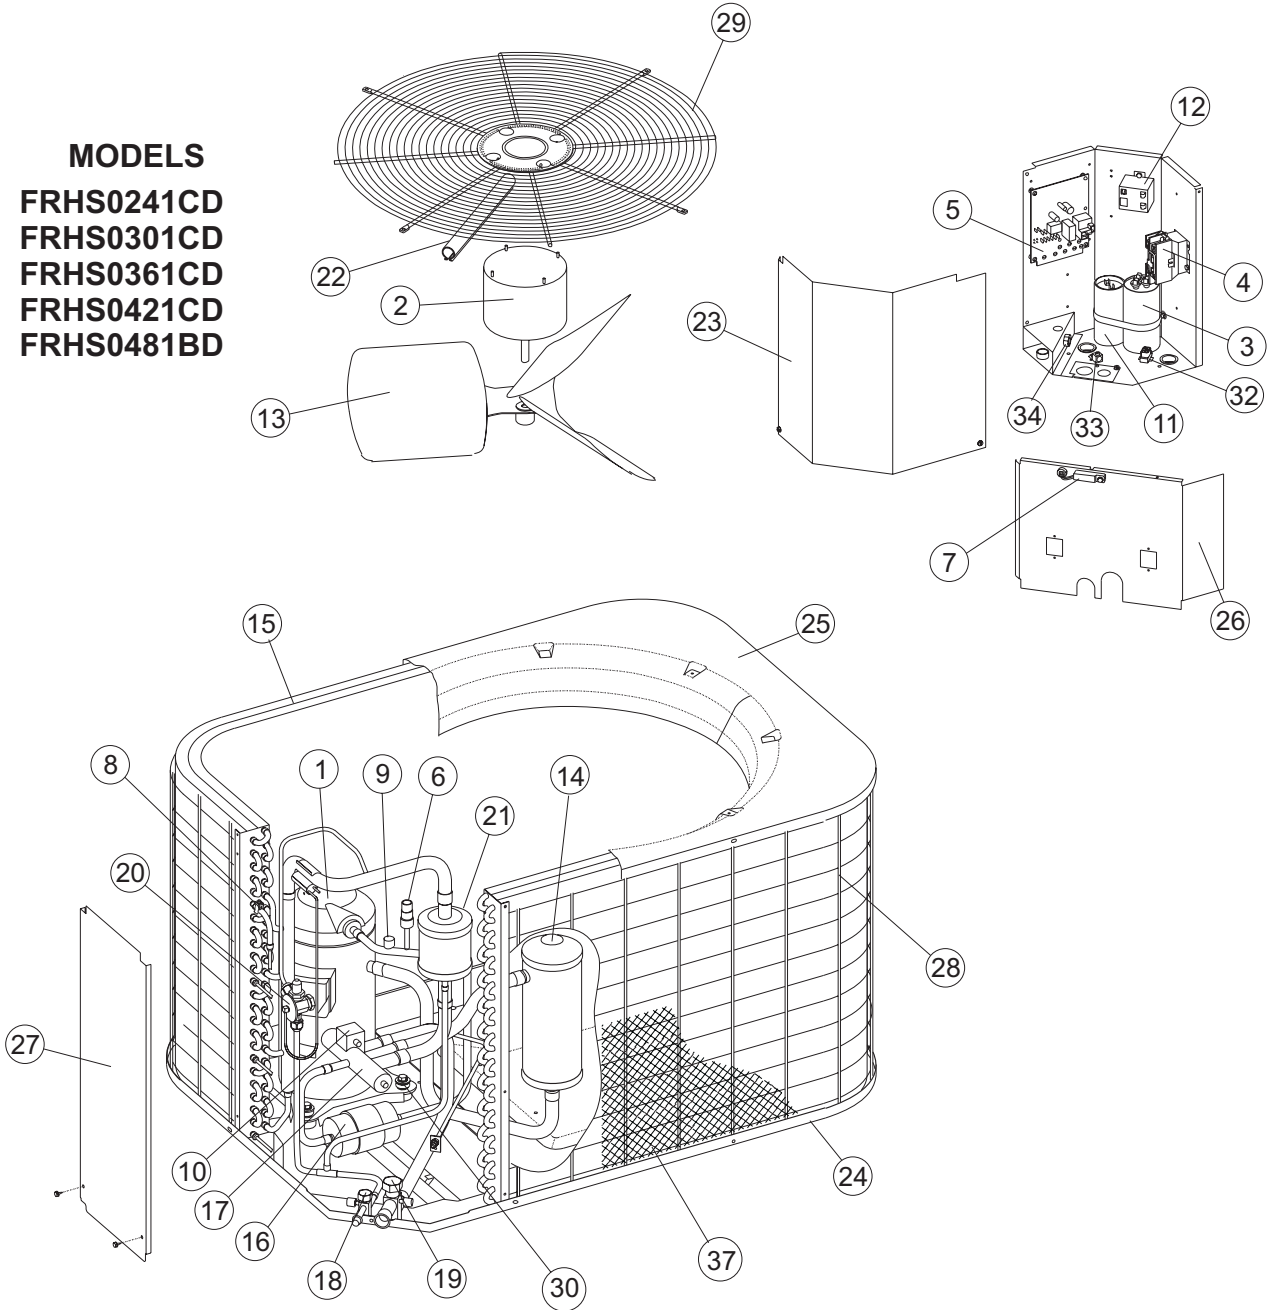

Models 24, 30, and 36

ITEM	DESCRIPTION	FRHS0241CD	FRHS0301CD	FRHS0361CD
1	Compressor	015-03527-004	015-02792-004	015-02689-004
1A*	Compressor Harness	025-31884-000	025-31884-000	025-31884-000
2	Fan Motor	024-27584-000	024-27584-000	024-27596-000
3	Capacitor, Dual (35/7.5 MFD) Capacitor, Dual (45/7.5 MFD)	024-25891-000 ---	---	---
4	Contactors (30 Amp) [M]	024-27531-000	024-27531-000	024-27531-000
5	Defrost Control	031-01975-001	031-01975-001	031-01975-001
6	Pressure Control [HP]	025-33305-048	025-33305-048	025-33305-048
7	Ambient Sensor	025-32701-015	025-32701-015	025-32701-015
8	Liquid Sensor	031-01296-000	031-01296-000	031-01296-000
9	High Temperature Switch	025-31926-000	025-31926-000	025-31926-000
10	Solenoid Coil	1456-9761	1456-9761	1456-9761
11	Start Capacitor	024-25191-000	024-25191-000	024-25191-000
12	Start Relay	024-26024-000	024-26024-000	024-26024-000
13	Fan Blade, 24" Diameter	026-35436-000	026-35436-000	026-31361-000
14	Accumulator	026-35435-000	026-35435-000	026-25573-008
15	Outdoor Coil Assembly	373-19020-204	373-19021-254	373-19022-304
16	Filter Drier	6536-3341	6536-3341	6536-3341
17	Reversing Valve	025-31929-000	025-31929-000	025-31930-000
18	Liquid Valve (3/8")	025-31899-000	025-31899-000	025-31899-000
19	Suction Valve (7/8") Suction Valve (1 1/8")	025-31901-000 ---	025-31901-000 ---	---
20	Expansion Valve	025-32798-024	025-32798-130	025-32798-036
21	Compensator Tank	026-35433-000	026-35433-000	026-35434-000
22	Wireway	028-13297-000	028-13297-000	028-13297-000
23	Control Box Cover	073-19009-101	073-19009-101	073-19009-101
24	Base Pan	073-19001-000	073-19001-000	073-19001-000
25	Top Panel	073-19002-101	073-19002-101	073-19002-101
26	Blockoff Plate	073-19008-124	073-19008-124	073-19008-130
27	Filler Panel	073-19007-124	073-19007-124	073-19007-130
28	Coil Guard	373-20091-014	373-20091-014	373-20091-022
29	Fan Guard	026-35511-024	026-35511-024	026-35511-024
30	Cushion Mount (4 Req'd)	6560-3041	6560-3041	6560-3041
31*	Wiring Diagram	035-15714-002	035-15714-002	035-15714-002
32	6 Position Plug	025-33306-006	025-33306-006	025-33306-006
33	Ground Lug	025-21798-000	025-21798-000	025-21798-000
34	Strain Relief	1216-235 1216-243	1216-235 1216-243	1216-235 1216-243
35*	Distributor Assembly	025-32799-004	025-32799-005	025-32799-006
36*	Acorn Nut (4 Req'd)	021-16829-000	021-16829-000	021-16829-000
37	Mesh, Coil Guard	028-14729-000	028-14729-000	028-14732-000
38*	Fastener, Push-in (6 Req'd)	021-18381-000	021-18381-000	021-18381-000

NOTE: *Not ShownNew replacement parts shown in **bold** face type at the first printing of parts list dated 1/04.

Major components and suggested stocking items are shown with shaded item number.

"←" Across from row indicates a change in that row.

--- Not applicable to specified model.

Models 42 and 48

ITEM	DESCRIPTION	FRHS0421CD	FRHS0481BD
1	Compressor	015-02690-004	015-02974-004
1A*	Compressor Harness	025-31884-000	025-31884-000
2	Fan Motor	024-27596-000	024-27596-000
3	Capacitor, Dual (55/5 MFD) Capacitor, Dual (40/5 MFD)	024-25049-000 ---	--- 024-25894-000
4	Contactora (30 Amp) [M]	024-27531-000	024-27531-000
5	Defrost Control	031-01975-001	031-01975-001
6	Pressure Control [HP]	025-33305-048	025-33305-048
7	Ambient Sensor	025-32701-015	025-32701-015
8	Liquid Sensor	031-01296-000	031-01296-000
9	High Temperature Switch	025-31926-000	025-31927-000
10	Solenoid Coil	1456-9761	1456-9761
11	Start Capacitor	024-25390-000	024-25098-000
12	Start Relay	024-25218-000	024-27608-000
13	Fan Blade, 24" Diameter	026-35437-000	026-35437-000
14	Accumulator	026-25573-008	026-25573-008
15	Outdoor Coil Assembly	373-19022-304	373-19024-404
16	Filter Drier	6536-3341	026-34506-000
17	Reversing Valve	025-31930-000	025-31930-000
18	Liquid Valve (3/8")	025-31899-000	025-31899-000
19	Suction Valve (1 1/8")	023-18363-000	023-18363-000
20	Expansion Valve	025-32798-036	025-32798-048
21	Compensator Tank	026-35434-000	026-35434-000
22	Wireway	028-13297-000	028-13297-000
23	Control Box Cover	073-19009-101	073-19009-101
24	Base Pan	073-19001-000	073-19001-000
25	Top Panel	073-19002-101	073-19002-101
26	Blockoff Plate	073-19008-130	073-19008-136
27	Filler Panel	073-19007-130	073-19007-136
28	Coil Guard	373-20091-022	373-20091-023
29	Fan Guard	026-35511-024	026-35511-024
30	Cushion Mount (4 Req'd)	028-12355-000	028-12355-000
31*	Wiring Diagram	035-15714-002	035-15714-002
32	6 Position Plug	025-33306-006	025-33306-006
33	Ground Lug	025-21798-000	025-21798-000
34	Strain Relief	1216-235 1216-243	1216-235 1216-243
35*	Distributor Assembly	025-32799-006	025-32799-006
36*	Acorn Nut (4 Req'd)	021-16829-000	021-16829-000
37	Mesh, Coil Guard	028-14732-000	028-14734-000
38*	Fastener, Push-in (4 Req'd)	021-18381-000	021-18381-000

NOTE: *Not ShownNew replacement parts shown in **bold** face type at the first printing of parts list dated 1/04.

Major components and suggested stocking items are shown with shaded item number.

"←" Across from row indicates a change in that row.

--- Not applicable to specified model.

TO ORDER AUTHORIZED FACTORY REPLACEMENT PARTS - Contact your Source1 HVAC Parts Distributor or visit our website at www.Source1Parts.com for a Distributor and Dealer listing.