



www.Source1Parts.com


HVAC SERVICE PARTS

FRHS SERIES 14 SEER HEAT PUMP (STYLE H)

Supersedes:035-20737-001 Rev. A (0405)

035-20737-001 Rev. B (0805)

1 of 4

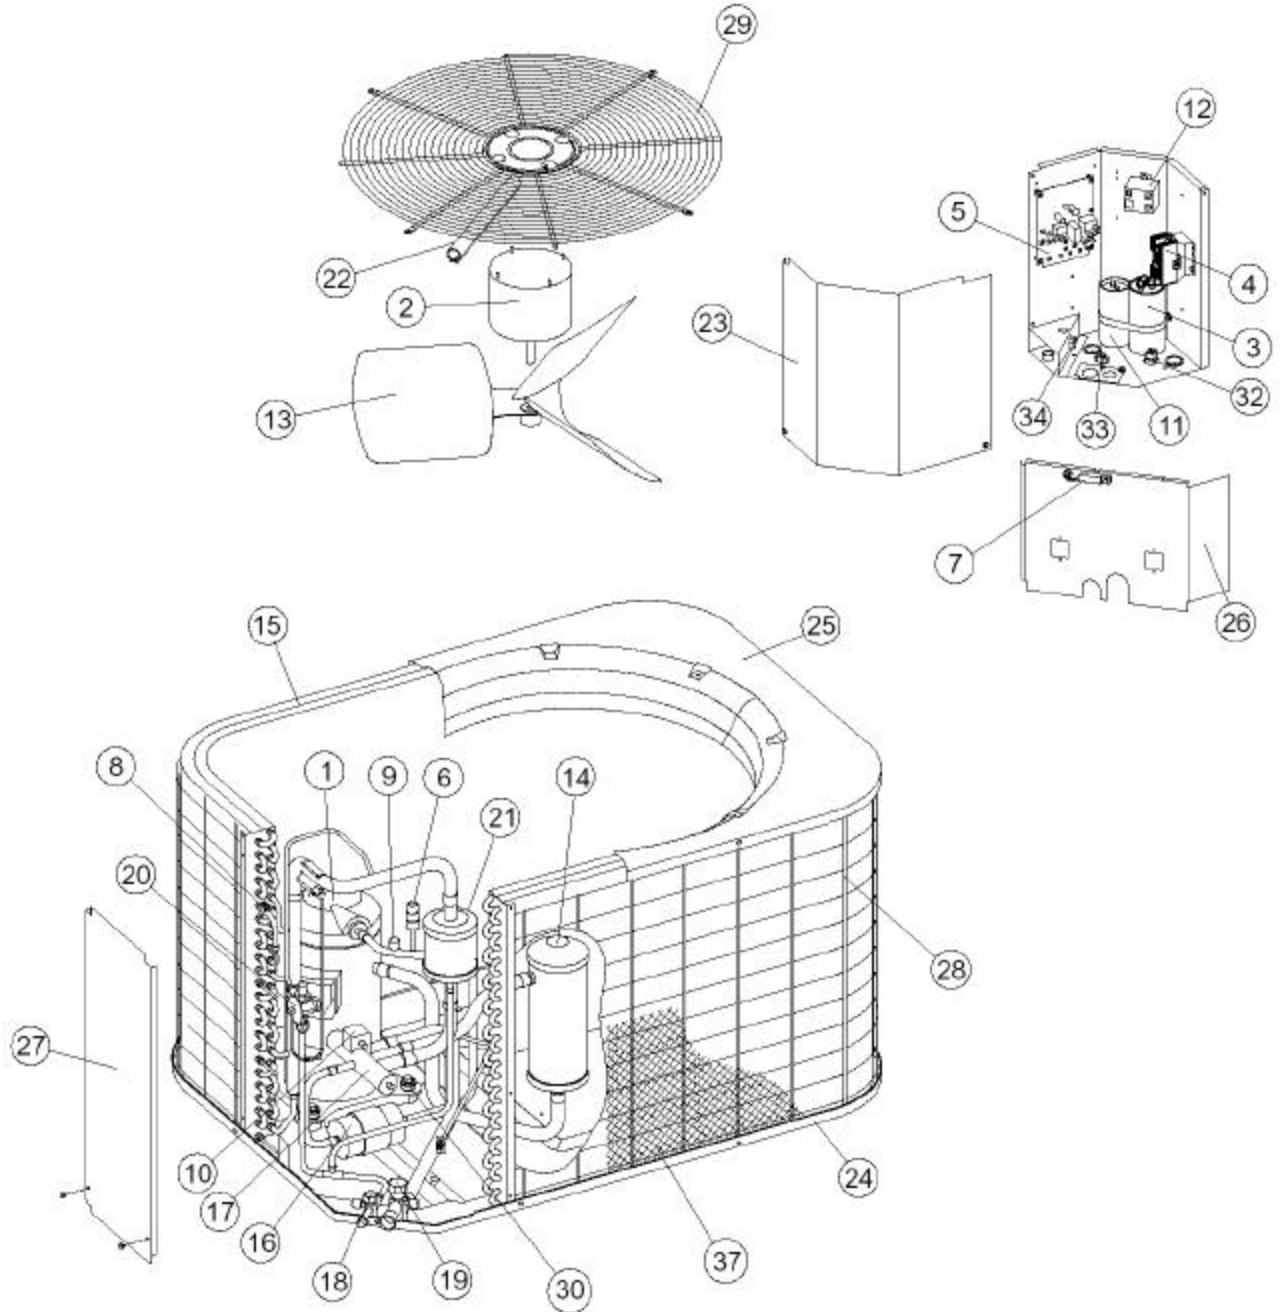

Models 24, 30, and 36

ITEM	DESCRIPTION	FRHS0241CDH	FRHS0301CDH	FRHS0361CDH
1	Compressor	015-03527-004	015-02792-004	015-02689-004
1A*	Compressor Harness	025-31884-000	025-31884-000	025-31884-000
2	Fan Motor	024-27584-000	024-27584-000	024-27596-000
3	Capacitor, Dual (35/7.5 MFD)	024-25891-000	---	---
	Capacitor, Dual (45/7.5 MFD)	---	024-25059-000	024-25338-000
4	Contactors (30 Amp) [M]	024-27531-000	024-27531-000	024-27531-000
5	Defrost Control	031-01975-001	031-01975-001	031-01975-001
6	Pressure Control [HP]	025-33305-048	025-33305-048	025-33305-048
7	Ambient Sensor	025-32701-015	025-32701-015	025-32701-015
8	Liquid Sensor	031-01296-000	031-01296-000	031-01296-000
9	High Temperature Switch	025-31926-000	025-31926-000	025-31926-000
10	Solenoid Coil	025-38948-000	025-38948-000	025-38948-000
11	Start Capacitor	024-25191-000	024-25191-000	024-25191-000
12	Start Relay	024-26024-000	024-26024-000	024-26024-000
13	Fan Blade, 24" Diameter	026-35436-000	026-35436-000	026-31361-000
14	Accumulator	026-35435-000	026-35435-000	026-25573-008
15	Outdoor Coil Assembly	373-23759-004	373-23759-005	373-23759-006
16	Filter Drier	6536-3341	6536-3341	6536-3341
17	Reversing Valve	025-38946-000	025-38946-000	025-38947-000
18	Liquid Valve (3/8")	025-31899-000	025-31899-000	025-31899-000
19	Suction Valve (7/8")	025-31901-000	025-31901-000	---
	Suction Valve (1 1/8")	---	---	023-18363-000
20	Expansion Valve	025-32798-024	025-32798-130	025-32798-036
21	Compensator Tank	026-35433-000	026-35433-000	026-35434-000
22	Wireway	028-13297-000	028-13297-000	028-13297-000
23	Control Box Cover	073-20018-001	073-20018-001	073-20018-001
24	Base Pan	073-19001-500	073-19001-500	073-19001-500
25	Top Panel	073-23757-001	073-23757-001	073-23757-001
26	Blockoff Plate	073-20002-801	073-20002-801	073-20002-803
27	Filler Panel	073-23758-003	073-23758-003	073-23758-001
28	Coil Guard	373-23760-003	373-23760-003	373-23760-001
29	Fan Guard	026-35511-824	026-35511-824	026-35511-824
30	Cushion Mount (4 Req'd)	6560-3041	6560-3041	6560-3041
31*	Wiring Diagram	035-15714-002	035-15714-002	035-15714-002
32	6 Position Plug	025-33306-006	025-33306-006	025-33306-006
33	Ground Lug	025-21798-000	025-21798-000	025-21798-000
34	Strain Relief	1216-235	1216-235	1216-235
35*	Distributor Assembly	025-32799-004	025-32799-005	025-32799-006
36*	Acorn Nut (4 Req'd)	021-16829-000	021-16829-000	021-16829-000
37	Mesh, Coil Guard	028-14729-000	028-14729-000	028-14732-000
38*	Fastener, Push-in (6 Req'd)	021-18381-000	021-18381-000	021-18381-000

NOTE: *Not Shown

New replacement parts shown in **bold** face type at the first printing of parts list dated 8/05.

Major components and suggested stocking items are shown with shaded item number.

"<" Across from row indicates a change in that row.

--- Not applicable to specified model.

Models 42 and 48

ITEM	DESCRIPTION	FRHS0421CDH	FRHS0481BDH
1	Compressor	015-02690-004	015-02974-004
1A*	Compressor Harness	025-31884-000	025-31884-000
2	Fan Motor	024-27596-000	024-27596-000
3	Capacitor, Dual (55/5 MFD)	024-25049-000	---
	Capacitor, Dual (40/5 MFD)	---	024-25894-000
4	Contactactor (30 Amp) [M]	024-27531-000	024-27531-000
5	Defrost Control	031-01975-001	031-01975-001
6	Pressure Control [HP]	025-33305-048	025-33305-048
7	Ambient Sensor	025-32701-015	025-32701-015
8	Liquid Sensor	031-01296-000	031-01296-000
9	High Temperature Switch	025-31926-000	025-31927-000
10	Solenoid Coil	025-38948-000	025-38948-000
11	Start Capacitor	024-25390-000	024-25098-000
12	Start Relay	024-25218-000	024-27608-000
13	Fan Blade, 24" Diameter	026-35437-000	026-35437-000
14	Accumulator	026-25573-008	026-25573-008
15	Outdoor Coil Assembly	373-23759-006	373-23759-003
16	Filter Drier	6536-3341	026-34506-000
17	Reversing Valve	025-38947-000	025-38947-000
18	Liquid Valve (3/8")	025-31899-000	025-31899-000
19	Suction Valve (1 1/8")	023-18363-000	023-18363-000
20	Expansion Valve	025-32798-036	025-32798-048
21	Compensator Tank	026-35434-000	026-35434-000
22	Wireway	028-13297-000	028-13297-000
23	Control Box Cover	073-20018-001	073-20018-001
24	Base Pan	073-19001-500	073-19001-500
25	Top Panel	073-23757-001	073-23757-001
26	Blockoff Plate	073-20002-803	073-20002-804
27	Filler Panel	073-23758-001	073-23758-002
28	Coil Guard	373-23760-001	373-23760-002
29	Fan Guard	026-35511-824	026-35511-824
30	Cushion Mount (4 Req'd)	028-12355-000	028-12355-000
31*	Wiring Diagram	035-15714-002	035-15714-002
32	6 Position Plug	025-33306-006	025-33306-006
33	Ground Lug	025-21798-000	025-21798-000
34	Strain Relief	1216-235	1216-235
35*	Distributor Assembly	025-32799-006	025-32799-006
36*	Acorn Nut (4 Req'd)	021-16829-000	021-16829-000
37	Mesh, Coil Guard	028-14732-000	028-14734-000
38*	Fastener, Push-in (4 Req'd)	021-18381-000	021-18381-000

NOTE: *Not ShownNew replacement parts shown in **bold** face type at the first printing of parts list dated 8/05.

Major components and suggested stocking items are shown with shaded item number.

"←" Across from row indicates a change in that row.

--- Not applicable to specified model.

TO ORDER AUTHORIZED FACTORY REPLACEMENT PARTS - Contact your Source1 HVAC Parts Distributor or visit our website at www.Source1Parts.com for a Distributor and Dealer listing.